

THANK YOU FOR VOLUNTEERING!



APPLIANCE MAINTENANCE & CLEANING LINKS

Below are written instructions for how to clean the appliances found in the Snack Shack. If you are viewing this on a device, you may also click the name of an item, and you will be redirected to a brief how-to video or user manual.

Air Fryer

- Wash the removable basket and tray with warm, soapy water using a non-abrasive sponge or soft brush
- Clean the interior heating element and exterior with a damp cloth and make sure all parts are completely dry before reassembling

Electric Kettle

- Fill kettle with equal parts water and white vinegar
- Turn on the kettle and allow it to boil
- Let it sit for 20 minutes, empty the water and then rinse thoroughly

George Foreman

- Pour water onto the hot griddle and close for about 20 seconds
- Unplug and wipe it down (careful – it will still be hot)
- For stubborn spots, make a mixture of one part vinegar/ three parts water and scrub
- Wash grease catcher in the sink with warm soapy water

Hot Dog Steamer

- Wash the Hot Dog Tray, Bun Warming Tray and Top Lid in warm soapy water. Then, rinse and dry thoroughly. CAUTION: DO NOT submerge steaming tray in water

Microwave

- Use spray bottle labeled “Water/ Vinegar” to spray inside of the microwave and thoroughly wipe down
- Remove plate and wash in the sink with warm, soapy water. Dry and replace

Popcorn Machine

- After kettle cord has been unplugged remove kettle from support brackets, and take the Kettle out of the main unit
- Remove both Wing Nuts by twisting counterclockwise
- Fill the Kettle with a small amount of hot, soapy water
NOTE: Be sure to keep the kettle cord receptacle dry
- Allow the Kettle to sit for 15 to 20 minutes to cut the grease
- Scrub the kettle, rinse carefully, and dry with microfiber cloth

THANK YOU FOR VOLUNTEERING!

- Replace the dual-hinged Lid and Wing Nuts, then place the Kettle back into the main unit
- Wipe down the rest of the unit (glass, bottom panel, outside of kettle, kernel catcher drawer, etc.) using the water and vinegar spray bottle
- For stubborn soils, a citrus degreaser may be used on the panel windows and door

Dash Shaved Ice Machine

- Unplug the ice maker and remove the locking lid, ice cup and serving pitcher
- Then, remove the stirring paddle
- When cleaning, exercise caution to avoid touching the shaving blade as it is very sharp
- DO NOT submerge the Main Body of the ice maker in water. To clean the main body, wipe down with a damp cloth
- Hand wash all other parts in the sink with a sponge, warm water, and mild detergent
- Dry all parts thoroughly before storing

Large Snow Cone Machine

- Dump any remaining ice from the top into the sink and wipe dry